Performance is everything.™

User Guide

Vax Careline: AU: 1300 361 505
NZ: 0800 800 900

Cyclonic Vacuum Cleaner

MACH FUSION

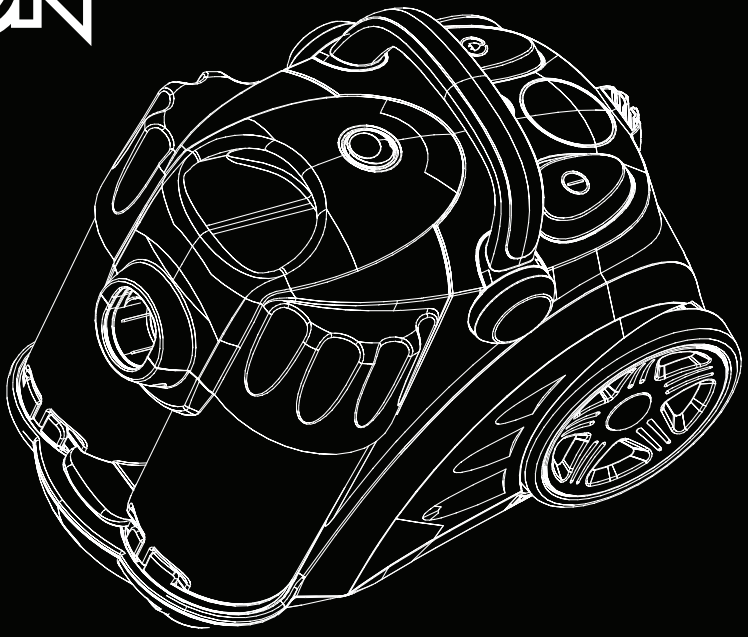

Get Cleaning...

What's your Vax's model number?

V M F U S 1 6 0 0

What's your serial number? (Located on the base of the machine)

Note these down in case you need them in future. Please keep instructions for further use.

Vax Service line: AU: 1300 361 505
NZ: 0800 800 900

Machine Overview

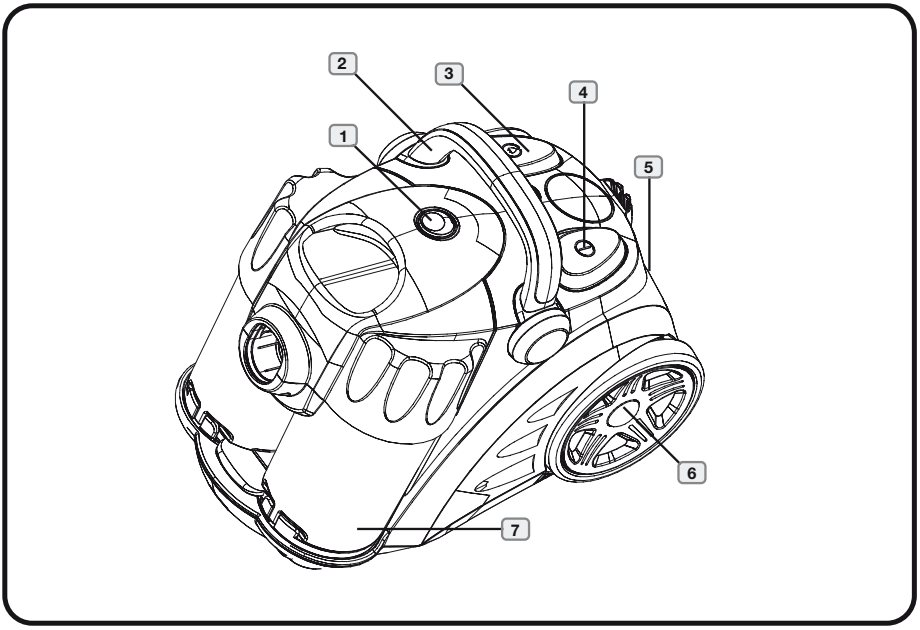

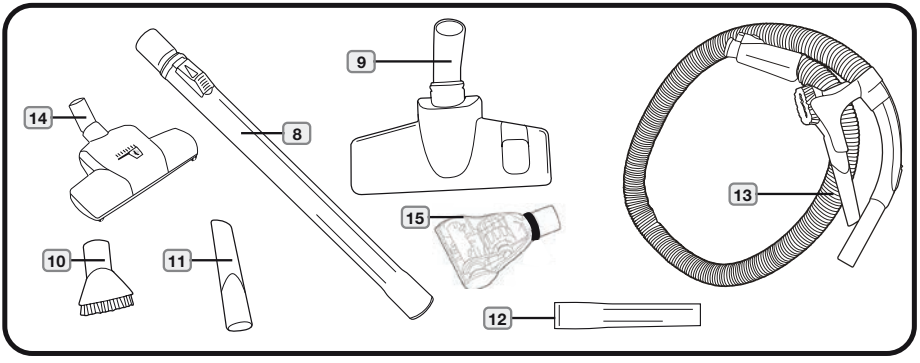

1. Dirt container locking button
2. Carry handle
3. Auto cord rewind
4. On/off button
5. Post-motor filter
6. Wheel
7. Dirt container
8. Telescopic tube
9. Combination floor head
10. Dusting brush
11. Crevice tool
12. Connection tube (to be used when attaching the turbo tools)
13. Flexible hose and handle
14. Turbo Brush
15. Turbo Tool

General Safety Information

FOR HOUSE HOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before disconnecting or connecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Use only as described in this manual. Use only Vax recommended attachments.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not pull or carry by cord. Do not use the cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
9. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
10. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or any hot, smoking ash or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
14. Do not vacuum harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.), or concrete or plaster dust.
15. Do not vacuum hard or sharp objects such as glass, nails, screws, coins, etc.
16. Do not use without ALL of the filters in place.
17. Take extra care when vacuuming on stairs.
18. Keep vacuuming area well lit.
19. Store the vacuum cleaner in a cool, dry area.
20. Turn off the on/off switch before unplugging the vacuum cleaner.
21. Use only SAA approved 10 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
22. Damaged cord to be replaced by manufacturer or authorised Vax service agent.
23. We recommend the use of a residual current device with a residual current rating of 30mA or less.

WARNING: Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the electrical outlet, make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

IMPORTANT: If the inlet, hose or telescopic tube is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

IMPORTANT: Cleaning filters improves vacuum performance. Vax recommends that your filters should be checked and cleaned periodically. If your filters are washable make sure they are completely dry before inserting back into the vacuum cleaner.

NOTE: If the supply cord is damaged it must be replaced by the manufacturer, or a similarly qualified person in order to avoid a hazard or invalidating the warranty.

IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason the unit should overheat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove dirt container and empty. Clean filters. Allow the unit to cool for approximately one hour. To re-start, plug into an electrical outlet and switch back on.

This machine is intended for household use only, and NOT for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

Operation

How to assemble

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet before assembling or removing the accessories.

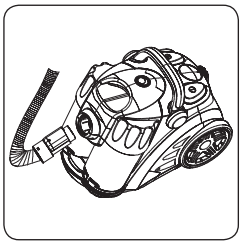

Insert the flexible hose into the inlet on the main body of the vacuum cleaner. Push in until it clicks into position.

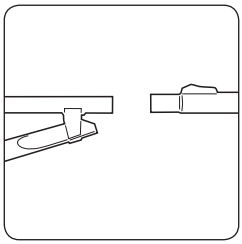

Push the telescopic extension tube on to the end of the handle.

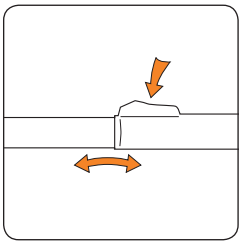

The telescopic extension tube can be lengthened or shortened by pushing the button and sliding the tube apart or together as required.

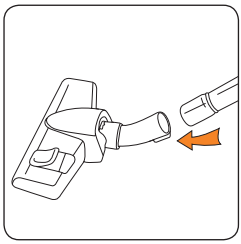

Fit the combination floor head by pushing onto the extension tube.

How to operate

Cord Release

Fully unwind the power cord. A yellow mark on the power cord indicates the recommended cord length. Do not extend the cord length beyond this mark.

On/Off Button

Insert the power plug into the electrical outlet. Press the on/off button located on the top of the vacuum cleaner to start. Press the button again to turn the vacuum cleaner off.

Carpet Cleaning

For carpet and rug cleaning press the rocker switch on the combination floor head to raise the brushes.

Hard floor cleaning

For hard floor cleaning, press the rocker switch on the combination floor head to lower the brushes.

How to operate (continued)

Cord Rewind

To rewind the power cord, press the cord rewind button and guide the power cord with one hand. Rewind 1-1 ½ metres of cord at a time. This will prevent the cord from whipping which could cause damage or injury.

Carry Handle

Use the carry handle located on the top of the machine to move the vacuum cleaner from room to room.

Hose Storage

For convenience there is a slot located on the rear of the vacuum cleaner where the floor tool and hose can be parked for carrying and storage.

Power Indicator

Located on the top of the machine, a green light will indicate that the machine is working correctly.

Full Dirt Container Indicator

Located behind the carry handle on the unit, the indicator light will illuminate red when the dirt container has become full, empty the dirt container. If the light stays on check the filters, hose, wand and floor tool for any blockage.

Accessories

The accessories can be attached directly to the handle by removing the telescopic tube and pushing in the desired accessory. The accessories can also be attached to the telescopic tube for extra reach. Remove the combination floor head and push on the desired accessory.

Dusting brush: for delicate surfaces.

Crevice Tool: for crevices, corners, sills, and cracks.

Large Turbo Brush: for deep cleaning of large carpet surfaces and rugs. Ideal for picking up pet hair.

Turbo Tool: Ideal for cleaning upholstery, stairs, car interiors.

Maintenance (Keep your Vax as good as new)

Dirt Container: Removal and Replacement

WARNING: Always unplug the vacuum cleaner from the electrical outlet before removing the dirt container.

WARNING: Do NOT use the vacuum cleaner without ALL of the filters and dirt container in place.

Emptying the Dirt Container

NOTE: The dirt container must be emptied every time the dirt reaches the max line.

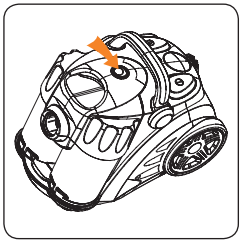

After removing the flexible hose, press the dirt container locking button on the top of the machine.

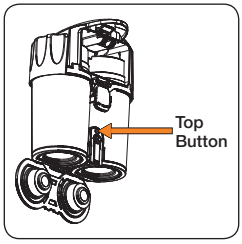

Remove the dirt container and position over a rubbish bin. Press the button as indicated to empty the dirt container.

The central filters, may then be wiped with a damp cloth to remove dirt residue. Allow to air dry completely before replacing back in the dirt container lid and using the vacuum cleaner.

Maintenance (Keep your Vax as good as new)

Cleaning the Pre-motor and Post-motor filters

NOTE: Vax recommends regularly cleaning the filters (depending on level of use) to optimise the performance of the vacuum cleaner.

NOTE: Do not use any detergents or boiling water to wash the filters (max 40˚C).

NOTE: Allow filters to completely dry before replacing back into the machine. We recommend 24hrs to dry completely.

Cleaning the Pre-motor Foam Filter

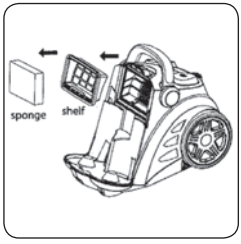

Remove the dirt container as previously directed.

Remove the filters as shown above.

The pre-motor foam filter, may be rinsed in luke warm water (max 40˚C). Allow to thoroughly air dry before replacing.

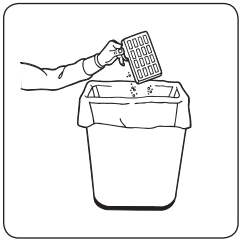

Clean Cage Filter

Separate the filter assembly by removing the foam filter from its plastic housing. Tap the foam filter on the inside of a rubbish bin to remove excess dust and dirt from filter.

Cleaning the Post-motor HEPA Filter

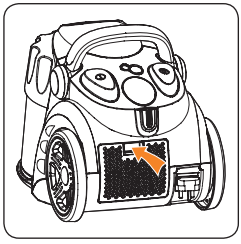

Release the post-motor cover by pressing in the catch at the top of the cover.

NOTE: This is located at the rear of the vacuum cleaner.

The post-motor HEPA filter can be removed and rinsed in luke warm water (max 40˚C). Allow to thoroughly air dry before replacing (allow 24hrs).

Replace the post-motor HEPA filter back in the case and return to the vacuum cleaner.

Replacement Filters

Replacement filters are available from your Vax stockist. Phone VAXCARE or visit www.vax.com.au

Storage

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet and rewind the power cord as directed before storing.

NOTE: Always store the vacuum cleaner base down.

Vax Service line: AU: 1300 361 505
NZ: 0800 800 900

FAQ's

WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Problem	Cause	Solution
Vacuum cleaner won't run	Not properly plugged into electrical outlet.	Plug in securely.
	Blown fuse/tripped breaker	Reset circuit breaker or replace fuse
	No electricity in the electrical outlet.	Check fuse or breaker.
	On/off switch not turned on.	Push on/off switch to 'on'.
	Motor thermostat has tripped.	Switch off and unplug the vacuum cleaner. Leave for one (1) hour before switching the vacuum cleaner back on.
	Blown fuse/tripped breaker.	Reset circuit breaker or replace fuse.
Cleaner won't pick up/loss of suction	Dirt container not installed properly.	Review dirt container replacement.
	Dirt container full or blocked.	Empty dirt container.
	Clogged filters.	Remove, clean and replace filters.
Accessories won't pick up	Accessories are not attached correctly.	Refer to page 4.
	Hose is not installed correctly.	Refer to page 4.
Dust escaping from the vacuum cleaner	Dirt container full.	Empty dirt container.
	Dirt container not installed correctly.	Review dirt container replacement.
	Hose is not installed correctly.	Review installation.
	Filter not installed completely.	Remove, clean and replace filters.

we're here to help

Instead of taking me back to the shop, simply call:

AU: 1300 361 505
NZ: 0800 800 900

vax.com.au

This does not affect your statutory rights

Other Information

Vax Service & Help

Vax Careline:

Australia	1300 361 505
New Zealand	0800 800 900
Monday-Friday	8.30am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

For the nearest Service Agent, please call the Vax Customer Careline or visit **vax.com.au**

Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	1600W
Capacity:	2 Litres
Cord length:	7m
Weight:	9.4kg
Filter:	Pre-motor – washable foam Post-motor – washable HEPA

Subject to technical change without notice.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Notes

Performance is everything.™

Distributed by Techtronic Industries Pty. Ltd.
Level 1, 660 Doncaster Road, Doncaster, Australia 3108.
www.vax.com.au Service Line: AU: 1300 361 505 / NZ: 0800 800 900